



## CLIMATE FACADE (CASSETTE) TO CURTAIN WALLING FIXING DETAIL

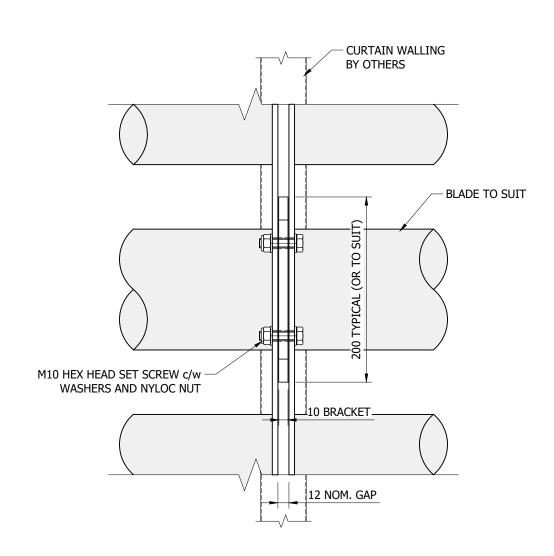

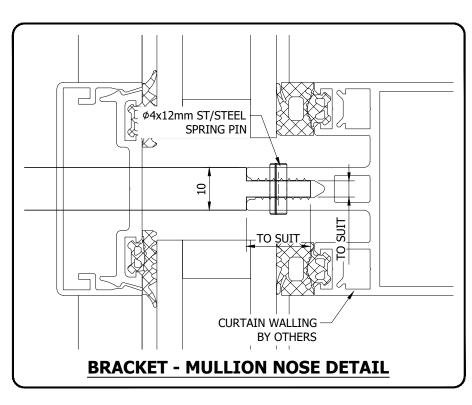

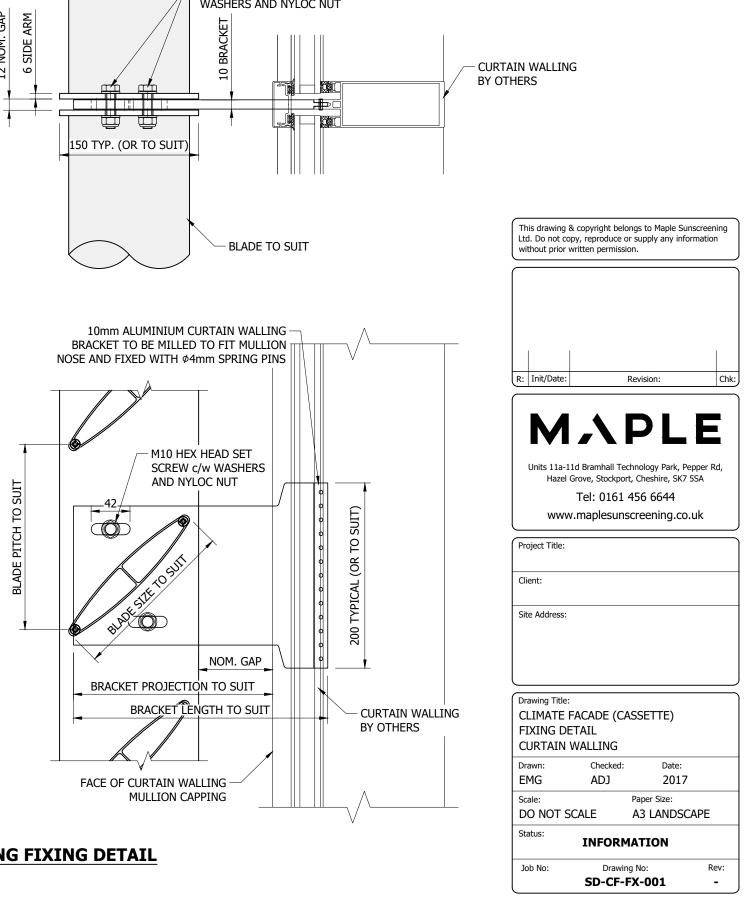

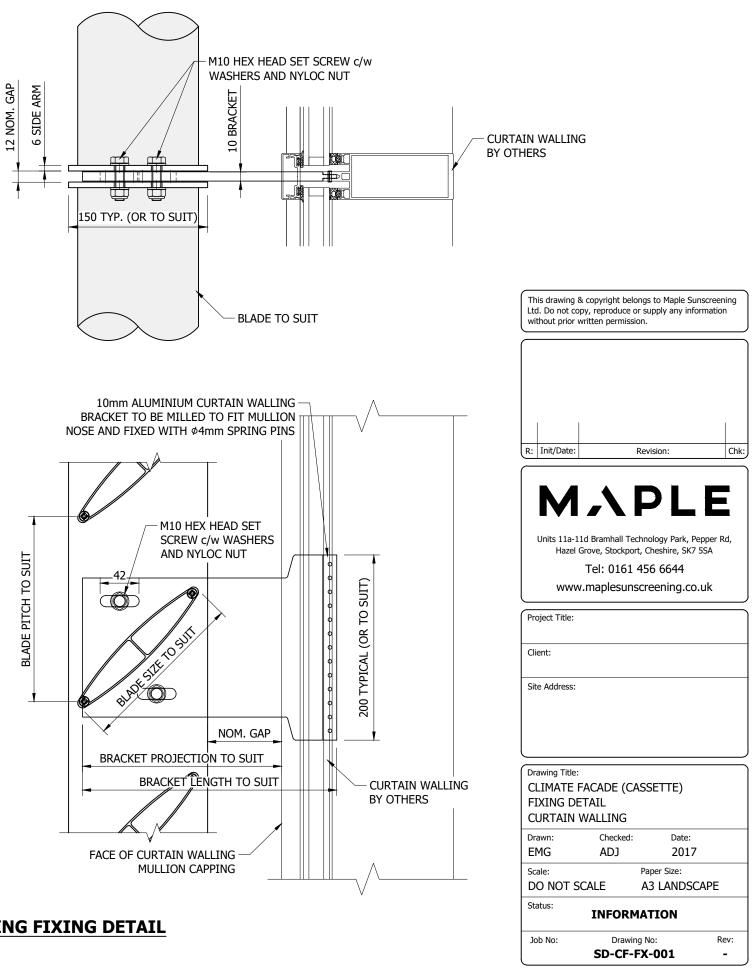

## NOTE: CW BRACKETS WILL USUALLY BE FREE ISSUED FOR INSTALLATION TO CW CONTRACTOR. ALL Ø4 HOLES SHOULD BE PRE-DRILLED IN CW MULLIONS. ONLY TOP HOLE WILL BE PRE-DRILLED IN BRACKET, OTHER HOLES IN BRACKET SHOULD BE DRILLED ON SITE THROUGH HOLES IN CW MULLION - THIS WILL ENSURE PERFECT ALIGNMENT.